 



# Speakerphone Manual

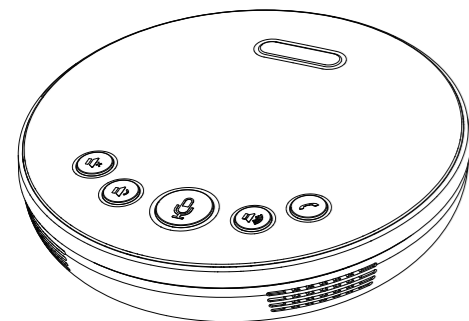


Version V2.0

## 1. Packing List

 
1. USB device

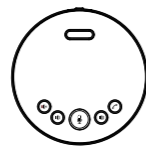

Speakerphone

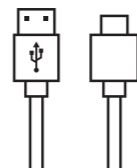 


USB Cable

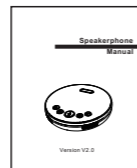 


Manual

 
2. Bluetooth device

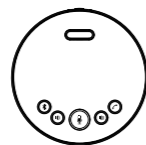

Speakerphone

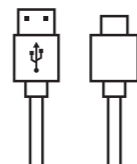 

USB Cable

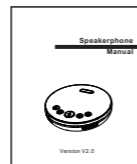 

Manual




Bluetooth Dongle




OTG Adapter

## 2. Charging

 Plug the device into a USB power source. The device lasts for up to 6 hours of talk time and takes approximately 3 hours (5V/500mA) to fully charge.

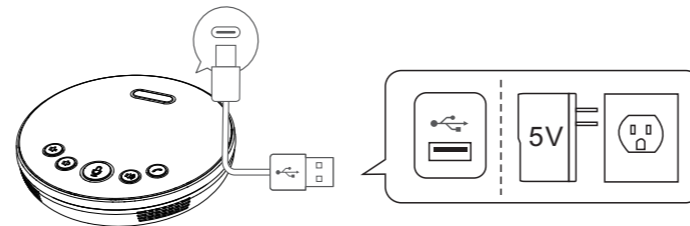


## 3. Low battery warning

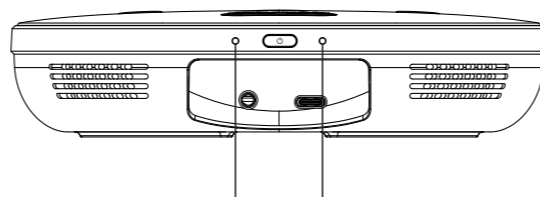 


When the battery is low, the led lights turn red and flash with voice prompt.

## 4. Button Function

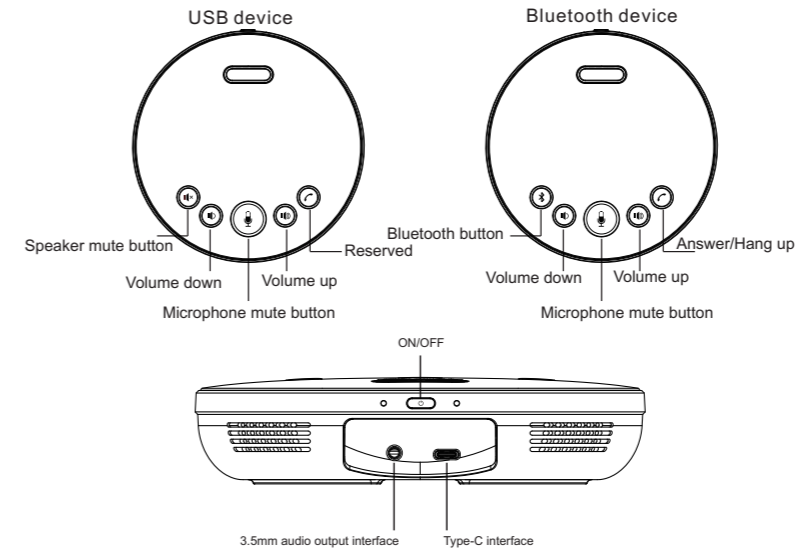 

	Volume button	Reduce/Increase volume
	Speaker mute button	ON/OFF Speaker mute (only for USB device)
	Answer/Hang up	Answer/Hang up when calling (only for Bluetooth device)
	Microphone mute button	ON/OFF Microphone mute
	Bluetooth button	Turn ON/OFF Bluetooth function (only for Bluetooth device)
	ON/OFF	Press ON/OFF button, speaker and microphone will be mute, microphone and speaker LED status will be red; press ON/OFF button again, microphone and speaker will be on, microphone and speaker LED indicator will turn green. Power ON/OFF button: Press about 3 to 5 seconds, speakerphone starts/ stops working(only for Bluetooth device).


## 5. LED Indicator Function

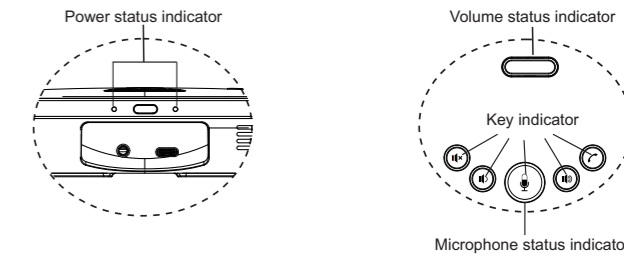 


Bluetooth status indicator (only for Bluetooth device)	Blue light flashing	Bluetooth is paring
	Green light on	Bluetooth connected
Microphone status indicator	Red light on	Microphone mute
	Green light on	Microphone working normally
Power status indicator	Green light on	Powered on
Speaker status indicator	Green light on	Speaker working normally
	Red light on	Speaker mute

## 6. Connection Introduction
 
### 6.1 USB Connection

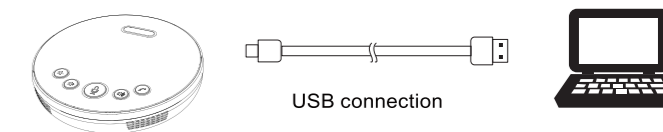


 1. We suggest you to use the original USB data cable to connect the speakerphone when connecting computer or other audio and video terminals;
2. Turn on automatically after connection;

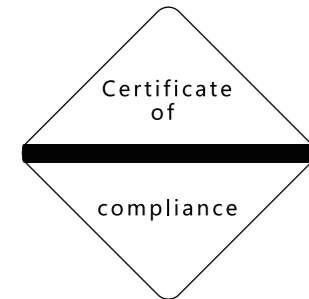


Q.A.  
QC PASSED

### 6.2 Bluetooth Connection

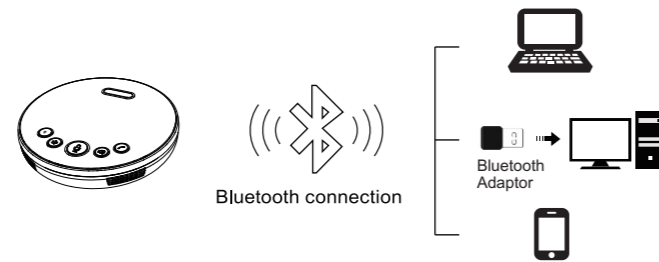 

1. When the device is under normally working condition, press "⌘" to turn on Bluetooth for pairing. Then the Bluetooth status indicator will flash;
2. Put the mobile device in the Bluetooth device search mode, and select the model of the device. After Bluetooth connection is succeeded, the Bluetooth status indicator will be ON.
3. Plug the Bluetooth Adaptor in your computer or other devices to enter pairing mode. The Bluetooth adapter will search for the Bluetooth automatically, and establish Bluetooth connection between the speakerphone and the adapter. After a successful connection, the Bluetooth indicator is always on.

### 6.3 Headset Connection

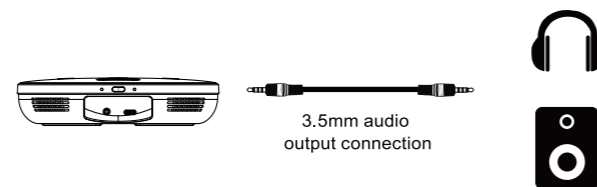 

Connect to headset jack using a 3.5mm cable.

### 7. Technical Specifications

Product Type	USB Speakerphone	Bluetooth Speakerphone
Picture		
Bluetooth	N/A	BT 5.0
Battery	N/A	2400mAh(Built-in lithium battery) Music time (up to 8 hours ) Battery life(call) up to 6 hours. Charge time up to 3 hours
Connection type	USB/AUX	USB/Bluetooth/AUX
Meeting room size	15-30m <sup>2</sup>	
Meeting with	3-12 attendees	
Pickup range	5 meters (16.4 feet)	
Mics	2x professional mics array	
Microphone type	Omni-directional (360 degree pickup range)	
Microphone sensitivity	-29dBFS	
Noise reduction	Yes	
Full duplex audio	Yes	
AEC	Yes	
Frequency range	100Hz to 22kHz	
Speaker	5W/95dB	
Interface	1 x Type-C, 1 x 3.5mm audio port	
System requirements	Windows 7/8/10 or above, MacOS 10.7 or above, Chrome OS V29.01547 or above	
Application support	Software: Skype, FaceTime, Zoom, Microsoft Teams, Google Hangouts, OBS and Xsplit, etc.	
Work temperature	0° -- 50°C	
Storage temperature	-10° -- +60°C	
Work humidity	20% -- 85% RH (non-condensing)	
Power supply	USB:5V DC @ 500 mA Maximum	
Product size	160mm*160mm*38mm/221mm*190mm*55mm((before / after packing)	
Product weight	0.44KG / 0.77KG(Net / Gross Weight)	

### 8. Warranty

All products purchased from our company are guaranteed to keep in good repair for 36 months. If there are any quality problems during the guarantee period, we will maintain them for free. Under any of the following conditions, related maintenance costs will be collected:

1. Product was not normally used.
2. Fire, electric shock, outside object collapse or other natural disasters causing the equipment damaged.
3. Unauthorized repair, misuse, abuse or change.

### Warranty Card

Thank you very much for choosing our products.

#### User Info

Name \_\_\_\_\_ Tel \_\_\_\_\_

Email \_\_\_\_\_ Post code \_\_\_\_\_

Address \_\_\_\_\_

#### Product information

Product Name \_\_\_\_\_

Factory Serial Number \_\_\_\_\_

#### Fault description

---



---



---



---

 


---


#### Attention

1. This card is considered as the Protection to fix warranty, so please reserve them carefully. Please fill in truthfully.
2. Please indicate the model number, Factory Serial Number and the detailed description of the fault information.

展开585X158 成品117X158 风琴折 128哑粉纸

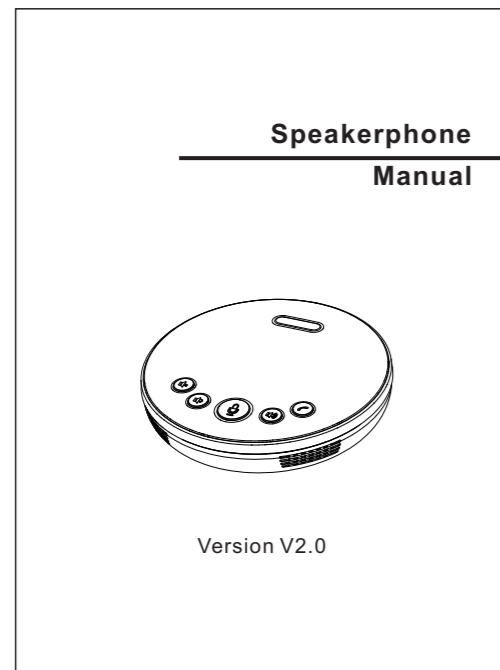

封面

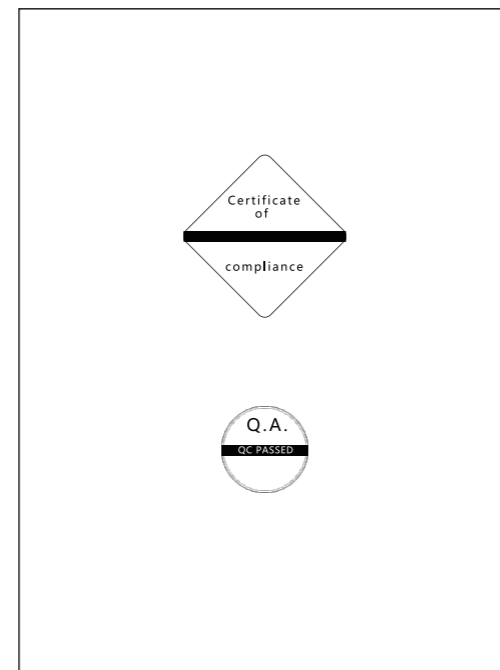 

封底